

CM-30E

Exit Switch

INSTALLATION INSTRUCTIONS

THIS PACKAGE INCLUDES:

1 x Exit Switch	1 x 6" Orange Wire Female Flag Connector	5 x Grey Plastic Wire Nut
1 x Plain Ziploc Bag	1 x 6" Blue Wire Female Flag Connector	2 x 6-32-3/4" Snake Eye Tamper Proof Screws
1 x 6" Black Wire Female Flag Connector	1 x 6" Grey Wire Female Flag Connector	1 x Key for Snake Eye Tamper Proof Screws
1 x 6" Red Wire Harness	2 x 6-32 x 3/4" Phillips Oval Head Screws	1 x Installation Manual

1. GENERAL DESCRIPTION

Camden CM-30 series illuminated Exit switches are designed to mount into a deep style single gang electrical box. The large 2" square translucent button is easy to push. One momentary micro switch is provided with Form C output, rated at 10 amps@125 VAC. CM-30E supplied with a 12V DC long-life LED.

2. SPECIFICATION

Models	CM-30E
Lens Color	Green Lens
Legend	"Push to Exit"
Size	4.5"H x 2.75"W x 2"D
Mounting	2 x #6-32 machine screws
Switch Rating	10 Amps @ 125 VAC
LED Models	100,000 hours
Voltage Required	12 V or 24 V DC ONLY

NOTES:

If CM-30E will be used with 24V DC, the supplied in-line resistor, must not be removed.

IMPORTANT:


Leave resistor on for 24 Volts,
Cut off resistor for 12 Volts

3. MOUNTING

1. Push the color-coded leads onto the switch terminals (if not already installed), as per the enclosed diagram. If illumination is not required, the Red & Black wires can be removed.
2. Connect the appropriate wires to your devices. Tuck wiring into box, and fasten switch plate using screws provided.

4. WARRANTY

Camden Door Controls guarantees the CM-30 to be free from manufacturing defects for 3 years from date of sale. If during the first 3 years the CM-30 fails to perform correctly, it may be returned to our factory where it will be repaired or replaced (at our discretion) without charge. There is no warranty for LED damage due to over voltage! Except as stated herein, Camden extends no warranties expressed or implied regarding function, performance or service.

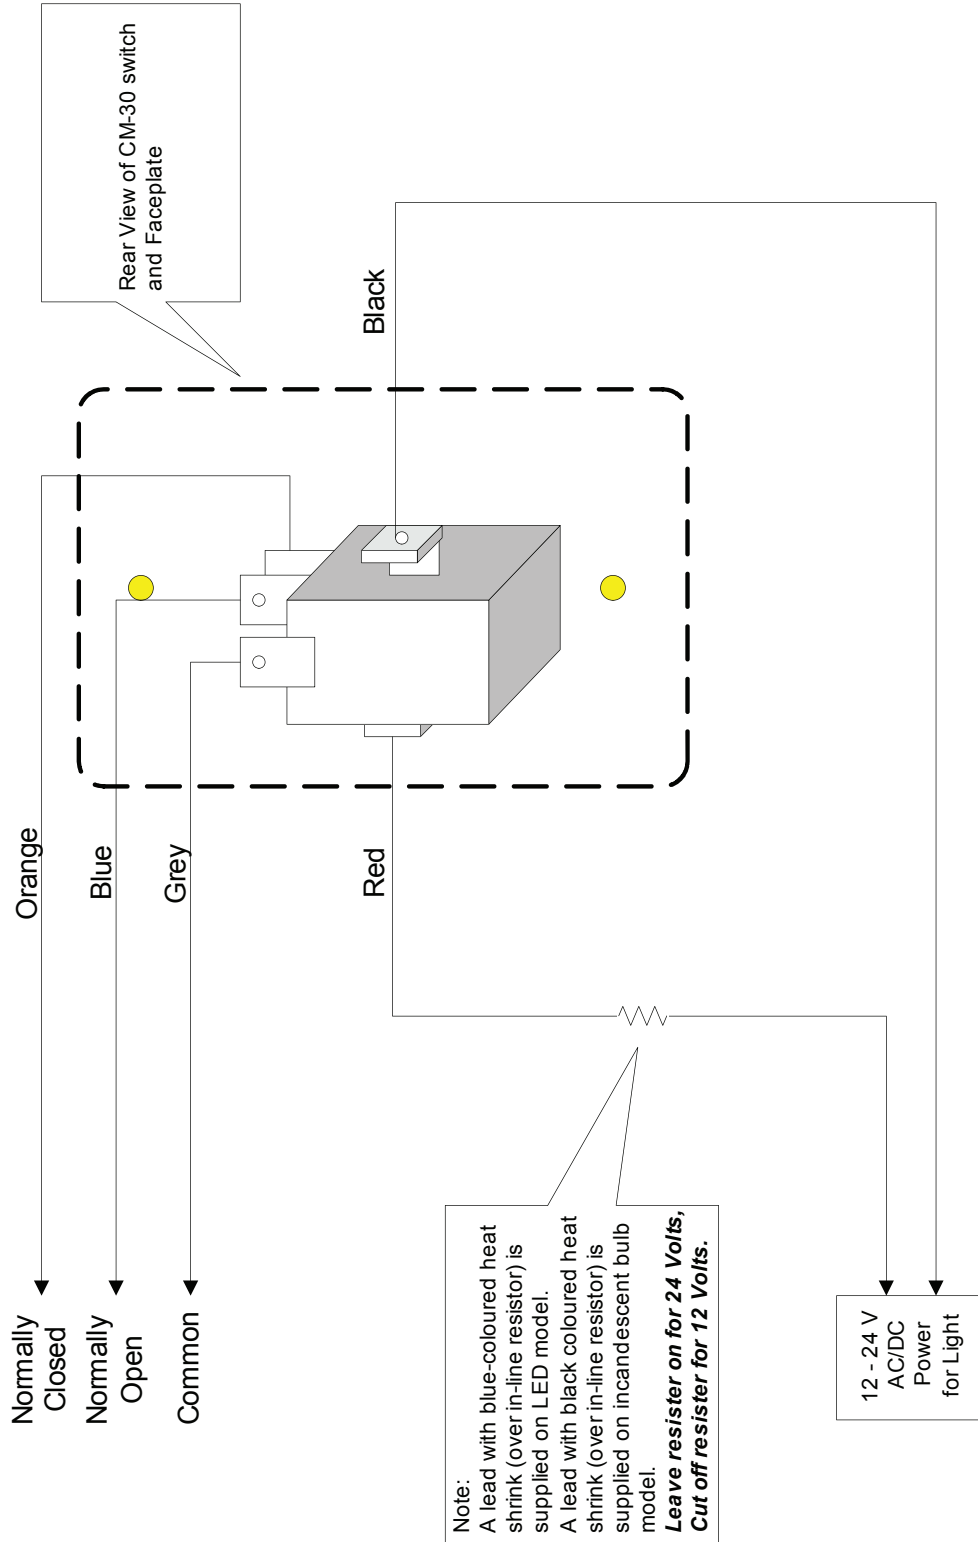

NOTE:
Access to light bulb (or LED) is obtained by first removing Cherry switch from two plastic retaining pins. Squeeze white retainer assembly between finger and thumb, and gently rock back and forth while pulling free of black threaded portion. Then pull out light bulb (or LED) to replace.



Camden Manufacturing

2395 Skymark Avenue
Mississauga, Ontario
L4W 4Y6

SCALE: NONE

DRAWN BY: DGW

DATE: 02/25/03

REVISED: 03/20/08

CM-30 Switch Wiring Diagram

DRAWING No: DRG-CM30-022503

FILENAME: CM-30 Diagram.vsd