


# TEMPLATE

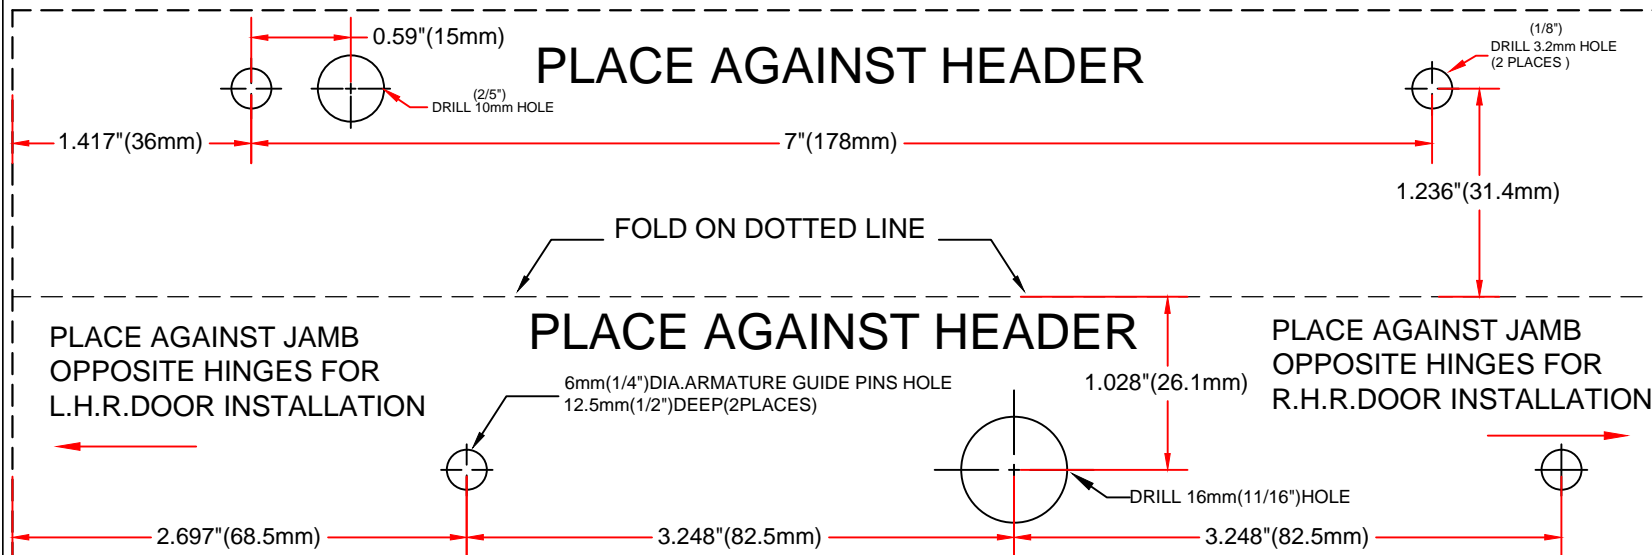

## MOUNTING INSTRUCTION

### STEP1

- FOLD TEMPLATE ALONG DOTTED LINE.
- PLACE TEMPLATE AGAINST DOOR AND HEAD FRAME.
- DRILL HOLES AS INDICATED ON TEMPLATE .

### STEP2

- MOUNT THE ARMATURE PLATE TO THE DOOR USING 1 RUBBER WASHER SANDWICHED BETWEEN 2 STEEL WASHERS(THE RUBBER WASHER AND 2 STEEL) WASHERS ARE INSTALLED ON THE THROUGH SEX NUT BETWEEN THE ARMATURE PLATE AND DOOR .

### STEP3

- DETACH MOUNTING PLATE FROM MAGNET BY REMOVING 2 SOCKET CAP SCREWS.SCREWS COULD BE ACCESSED THROUGH BOTTOM OF MAGNET.
- INSTALL THE MOUNTING PLATE WITH 2 FLAT HEAD SCREWS(THE 2 M5\*15 FLAT HEAD SCREWS ARE INSTALLED IN THE SLOTTED HOLES FOR ADJUSTMENT).
- ADJUST MOUNTING PLATE SO THAT IT FORMS A RIGHT ANGLE WITH THE ARMATURE PLATE .
- USING THE MOUNTING PLATE AS A TEMPLATE, DRILL THE WIRE HOLE.
- DRILL AND INSTALL THE REMAINING MOUNTING SCREWS.

### STEP4

- INSTALL MAGNET TO MOUNTING PLATE WITH 2 M4 SCREWS SUPPLIED.

### STEP5

- INSTALL ELECTRICAL WIRING PER INSTRUCTION SHEET.

### STEP6

- TEST ALL FUNCTIONS OF THIS MODEL (SEE WIRING INSTRUCTION).

### STEP7

- INSERT 2 ALUMINUM CAPS TO COVER THE TWO M4 SCREW HOLES.